



Umbrellas Rope Repair Guide

In the event that your Greencorner Umbrella should require a rope replacement, the following instructions will guide you through a safe and successful repair.

Tools Needed:

- Scissors
- Lighter

All proper repair parts are provided by Greencorner. Please visit the Greencorner.com for our parts list and more information.

Rope Replacement

1. To remove the old rope, with the umbrella in the up position, simply cut it in an easy to access spot and unwind the rope from the pulleys. Be careful not to scratch the umbrella with the scissors.
2. With the new rope, carefully take a lighter and burn one end of the rope. Make sure not to burn yourself at all and not to burn the rope too long. This burnt end is the end you will be feeding through the umbrella's pulley system, and burning it is to ensure that the rope does not fray.
3. Bring the rope up between the ribs in front of the left of the bottom pulley on the sliding hub.
4. Bring the rope to the top double pulley on the pole and send it left to right over the top of the top roller.
5. Then feed the rope down right to left around the bottom of the roller in the bottom pulley.
6. Bring the rope back up in-between the rollers in the top double pulley, sending it left to right.
7. Then feed the rope down through the eyelet screw (the ring to the right off the bottom pulley) and knot the rope at the end to secure it.
8. You can carefully burn the knot a little to ensure the knot will hold longer. Be careful not to burn yourself or the umbrella.
9. If done correctly, you should now be able to pull the rope to bring the sliding hub up as a test.
10. Close the umbrella by releasing the metal pin and using the rope to lower it.
11. Now with the umbrella closed, measure out the length of the rope. It should not be touching the base plate or ground. If it is too long, be sure to carefully cut it, being careful to not scratch anything else.
12. **Note:** if you barely see the rope at this point, the rope was cut too short.
13. After trimming, feed the rope end through the wooden rope knob and knot the end.
14. Carefully burn the end of the rope and knot securely.

greencorner.com
T – 888.428.0800
F – 407.859.1045
info@greencorner.com