

B23 Low Profile Base Installation

Contents:

Needed:


Steel Plate, Steel Tube, 3 Knobs, 2 Sticks, Hardware

Tools & Multiple People


Installation

WARNING: This assembly will take SEVERAL people due to weight and difficulty.

1. Assemble the Base

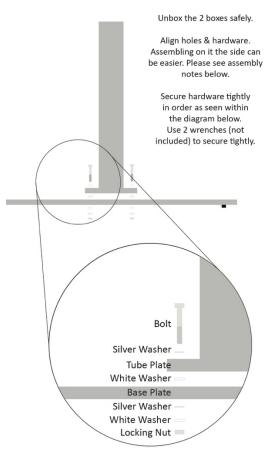

2. Ready Base for Umbrella

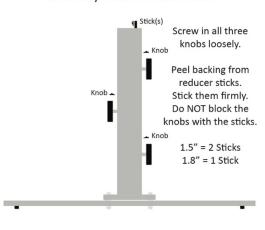

Peeling Backing Off Reducer Sticks

1 Stick









Assembly Notes:

We are not liable for any damage or injury during assembly. With that said, the easiest way to assemble seems to be on its side. For the photos, we had two people get the large

plate on its side, with the stronger person (A) holding the large plate up by his legs. Then A held up the tube and the second person (B) got the hardware onto the tube. That can be seen to the left. Then B leads the hardware through as A slowly brought the tube to the plate and B tightened them together. Both people worked together to safely and slowly set the base down.

It may be easier with more then two people.



greencorner.com 407-851-7018 info@greencorner.com



B23 Low Profile Base Installation

Optional Feet

WARNING: This will take SEVERAL people due to weight & difficulty.


Remove using rubbing alcohol (not included; please follow all warning and directions on original packaging) all 4 black square blocks already on the lowest base plate under the corners. Thread each foot one at a time in from underneath and tighten nut securely on top.



Optional Wheels

WARNING: This will take SEVERAL people due to weight & difficulty.

Remove using rubbing alcohol (not included; please follow all warning and directions on original packaging) all 4 black square blocks already on the lowest base plate under the corners. Lock each wheel, to ensure as you install they won't move around easily. Thread each wheel w/washer one at a time in from underneath and tighten nut w/washer securely on top.

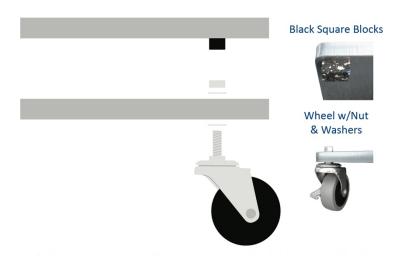

greencorner.com 407-851-7018 info@greencorner.com